 


Series Smart Office

Product Manual

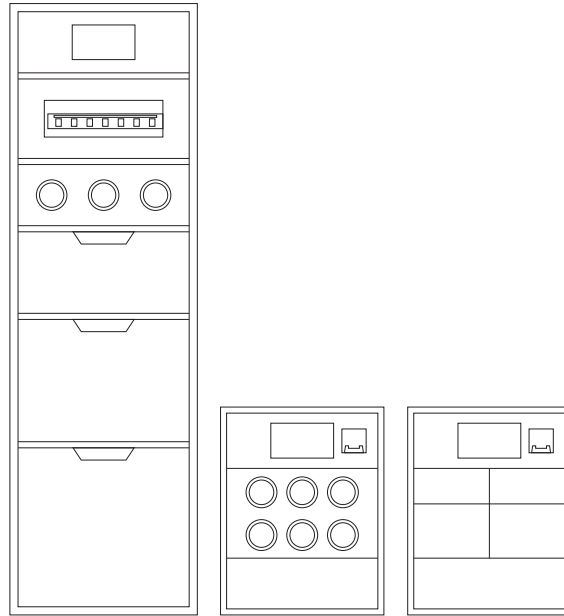

K10-A/K10-B1/K10-B2

Main Interface

Administrator login

Date and Time

 
Network status



Power status


User operation area


Administrator Login

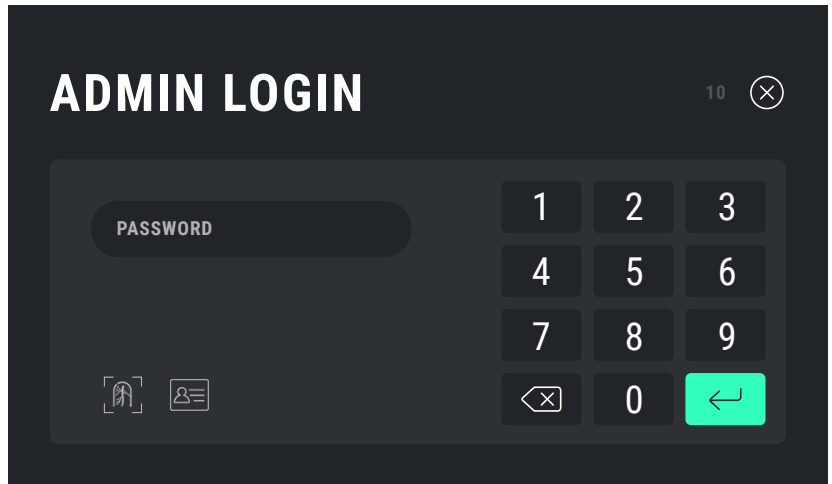

- 1 Click "System Manager" on the home page to enter the administrator login page.
- 2 Enter the initial password "00000" when you first login.
- 3 Click the " ← " button to enter the setting page.

 Administrator Settings

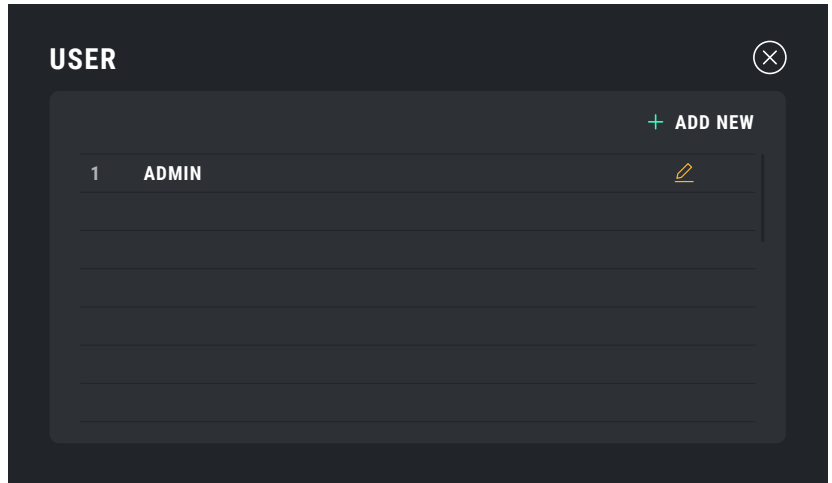

- 1 Click "User" on the settings page after the administrator has successfully logged in.
- 2 Click "  " button to enter the edit page.
- 3 In the edit page, you can change the administrator name, initial password or add administrator card number and finger vein.

Add New User




- 1 Click "User" on the settings page after the administrator has successfully logged in.
- 2 Click "Add New" to enter the edit page.

EDIT USER ✕

USER ID	22010803	
USER NAME	JASON	
USER PASSWORD	333666	
PERMISSION	YES	
USER CARD	NO	
FINGER VEIN	NO	

 
- 1 In the edit page, you can change user ID, user name, password, add user permission, card, finger veins.
- 2 The user ID is required, and the default password is "333".

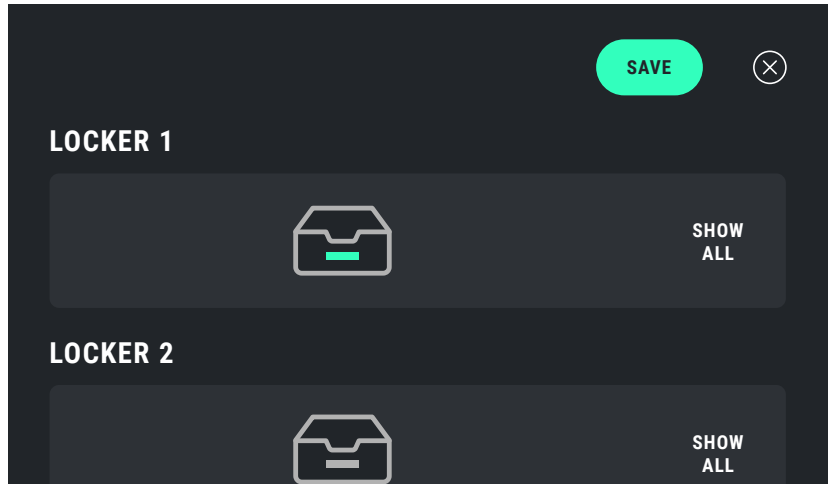

Set User Permission



 
- 1 Click the icon to add permission, green means add successfully, gray means no permission.
- 2 Click "Show all" to see what items are under this locker.
- 3 Click "Save" to finish setting.

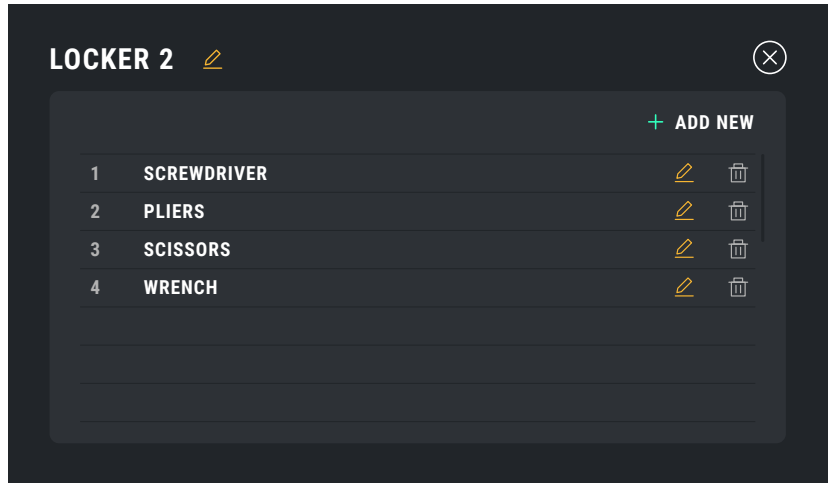Edit Locker




- 1 Select a locker you want to edit after the administrator has successfully logged in.
- 2 Click the "  " button at the top to edit the locker name.
- 3 Click "Add New", you can add items in this locker.
- 4 Click the "  " button to edit the item name.

 Parameter Setting

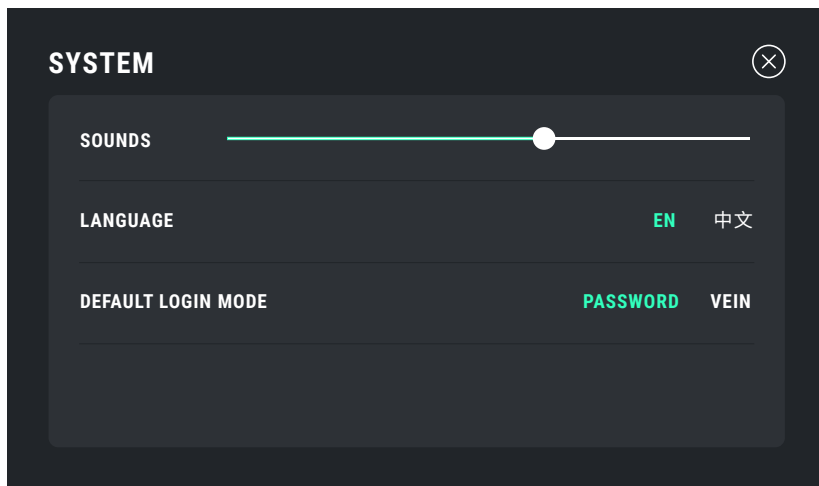


- 1 Select "System" after the administrator has successfully logged in.
- 2 In the parameter setting page, you can set the volume, language, and default login mode.

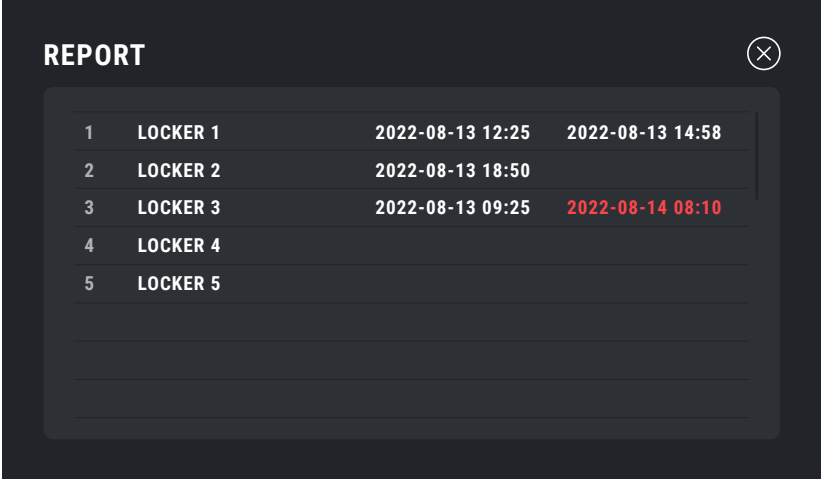

The screenshot shows a dark-themed interface with a 'REPORT' title and a close button (X) in the top right corner. Below the title is a table with five rows of data. The first row shows 'LOCKER 1' with opening and closing times on 2022-08-13. The second row shows 'LOCKER 2' with a closing time on 2022-08-13. The third row shows 'LOCKER 3' with an opening time on 2022-08-13 and a closing time on 2022-08-14. The fourth and fifth rows show 'LOCKER 4' and 'LOCKER 5' respectively, with no data displayed.


ID	Locker Name	Opening Time	Closing Time
1	LOCKER 1	2022-08-13 12:25	2022-08-13 14:58
2	LOCKER 2		2022-08-13 18:50
3	LOCKER 3	2022-08-13 09:25	2022-08-14 08:10
4	LOCKER 4		
5	LOCKER 5		

 - 1 Select "Report" after the administrator has successfully logged in.
- 2 In the report page, the latest door opening and closing time is displayed.

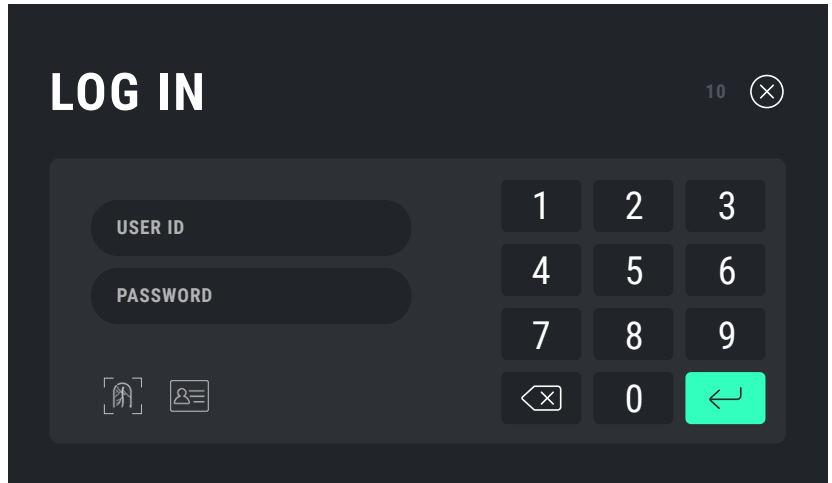

- 1 Click on any locker in the main interface to enter the login page.
- 2 Enter your user ID and password, then click the " ← " button.
- 3 You can also login by swipe card or finger vein.

 Take and Return Items

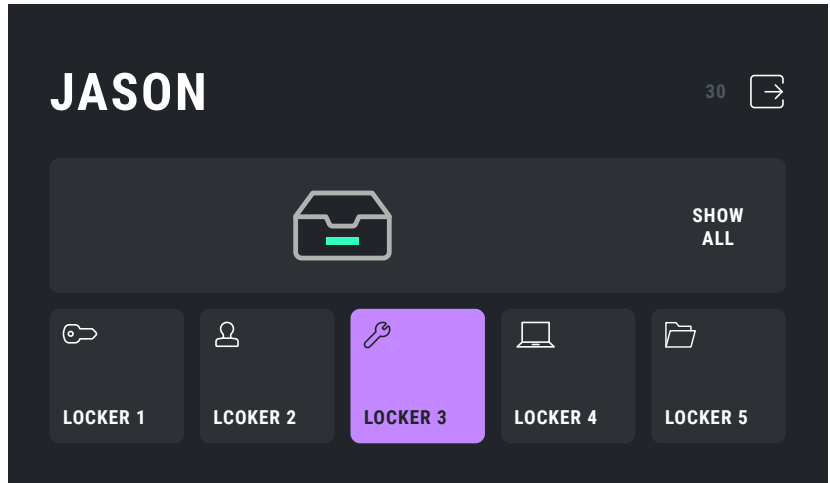

- 1 User login to enter the operation page.
- 2 Select the locker you want to open in the bottom menu, then click the icon.
- 3 Allow to open multiple lockers at the same time, when all lockers are closed, the current account is logged out.
- 4 Click " → " button to log out immediately.

Special Announcement

Please refer to the actual product, the instructions are for reference only.

The manual and program will be updated in real time according to the product, and there will be no notice if it's updated.

If you do not follow the instructions in the manual, the user shall bear any losses caused thereby.

The final interpretation of this manual belongs to Landwell Europe GmbH

© Copyright Landwell 2023

LANDWELL®